

On/Off:

- Slide the switch to the right to turn on
- Switch² has a 15 minute auto shut-off feature. Press any button to wake from sleep mode
- The 3 LEDs on the back of the device indicate battery level. Pulsing lights indicate less than 10% remaining

APP Connection - iOS:

- Download the Lablink Browser from www.lablinkbrowser.com
- Make sure to allow any permission pop-ups during this process
- Copy the following link and paste it into the LabLink browser to access the web app:
<https://drdabber.app/>
- Switch² must be powered on and nearby. Press “Launch” then select your device from the list. Perform any necessary firmware updates

APP Connection - Android:


- Download the Dr.Dabber Sync app from the Google Play Store
- Make sure to allow any permission pop-ups during this process
- Switch² must be powered on and nearby. Press “Launch” then select your device from the list. Perform any necessary firmware updates


Change Temperature Setting:







- Press the **+ button** to increase temperature, and the **- button** to decrease temperature. The LEDs will change colors to indicate the selected temperature setting

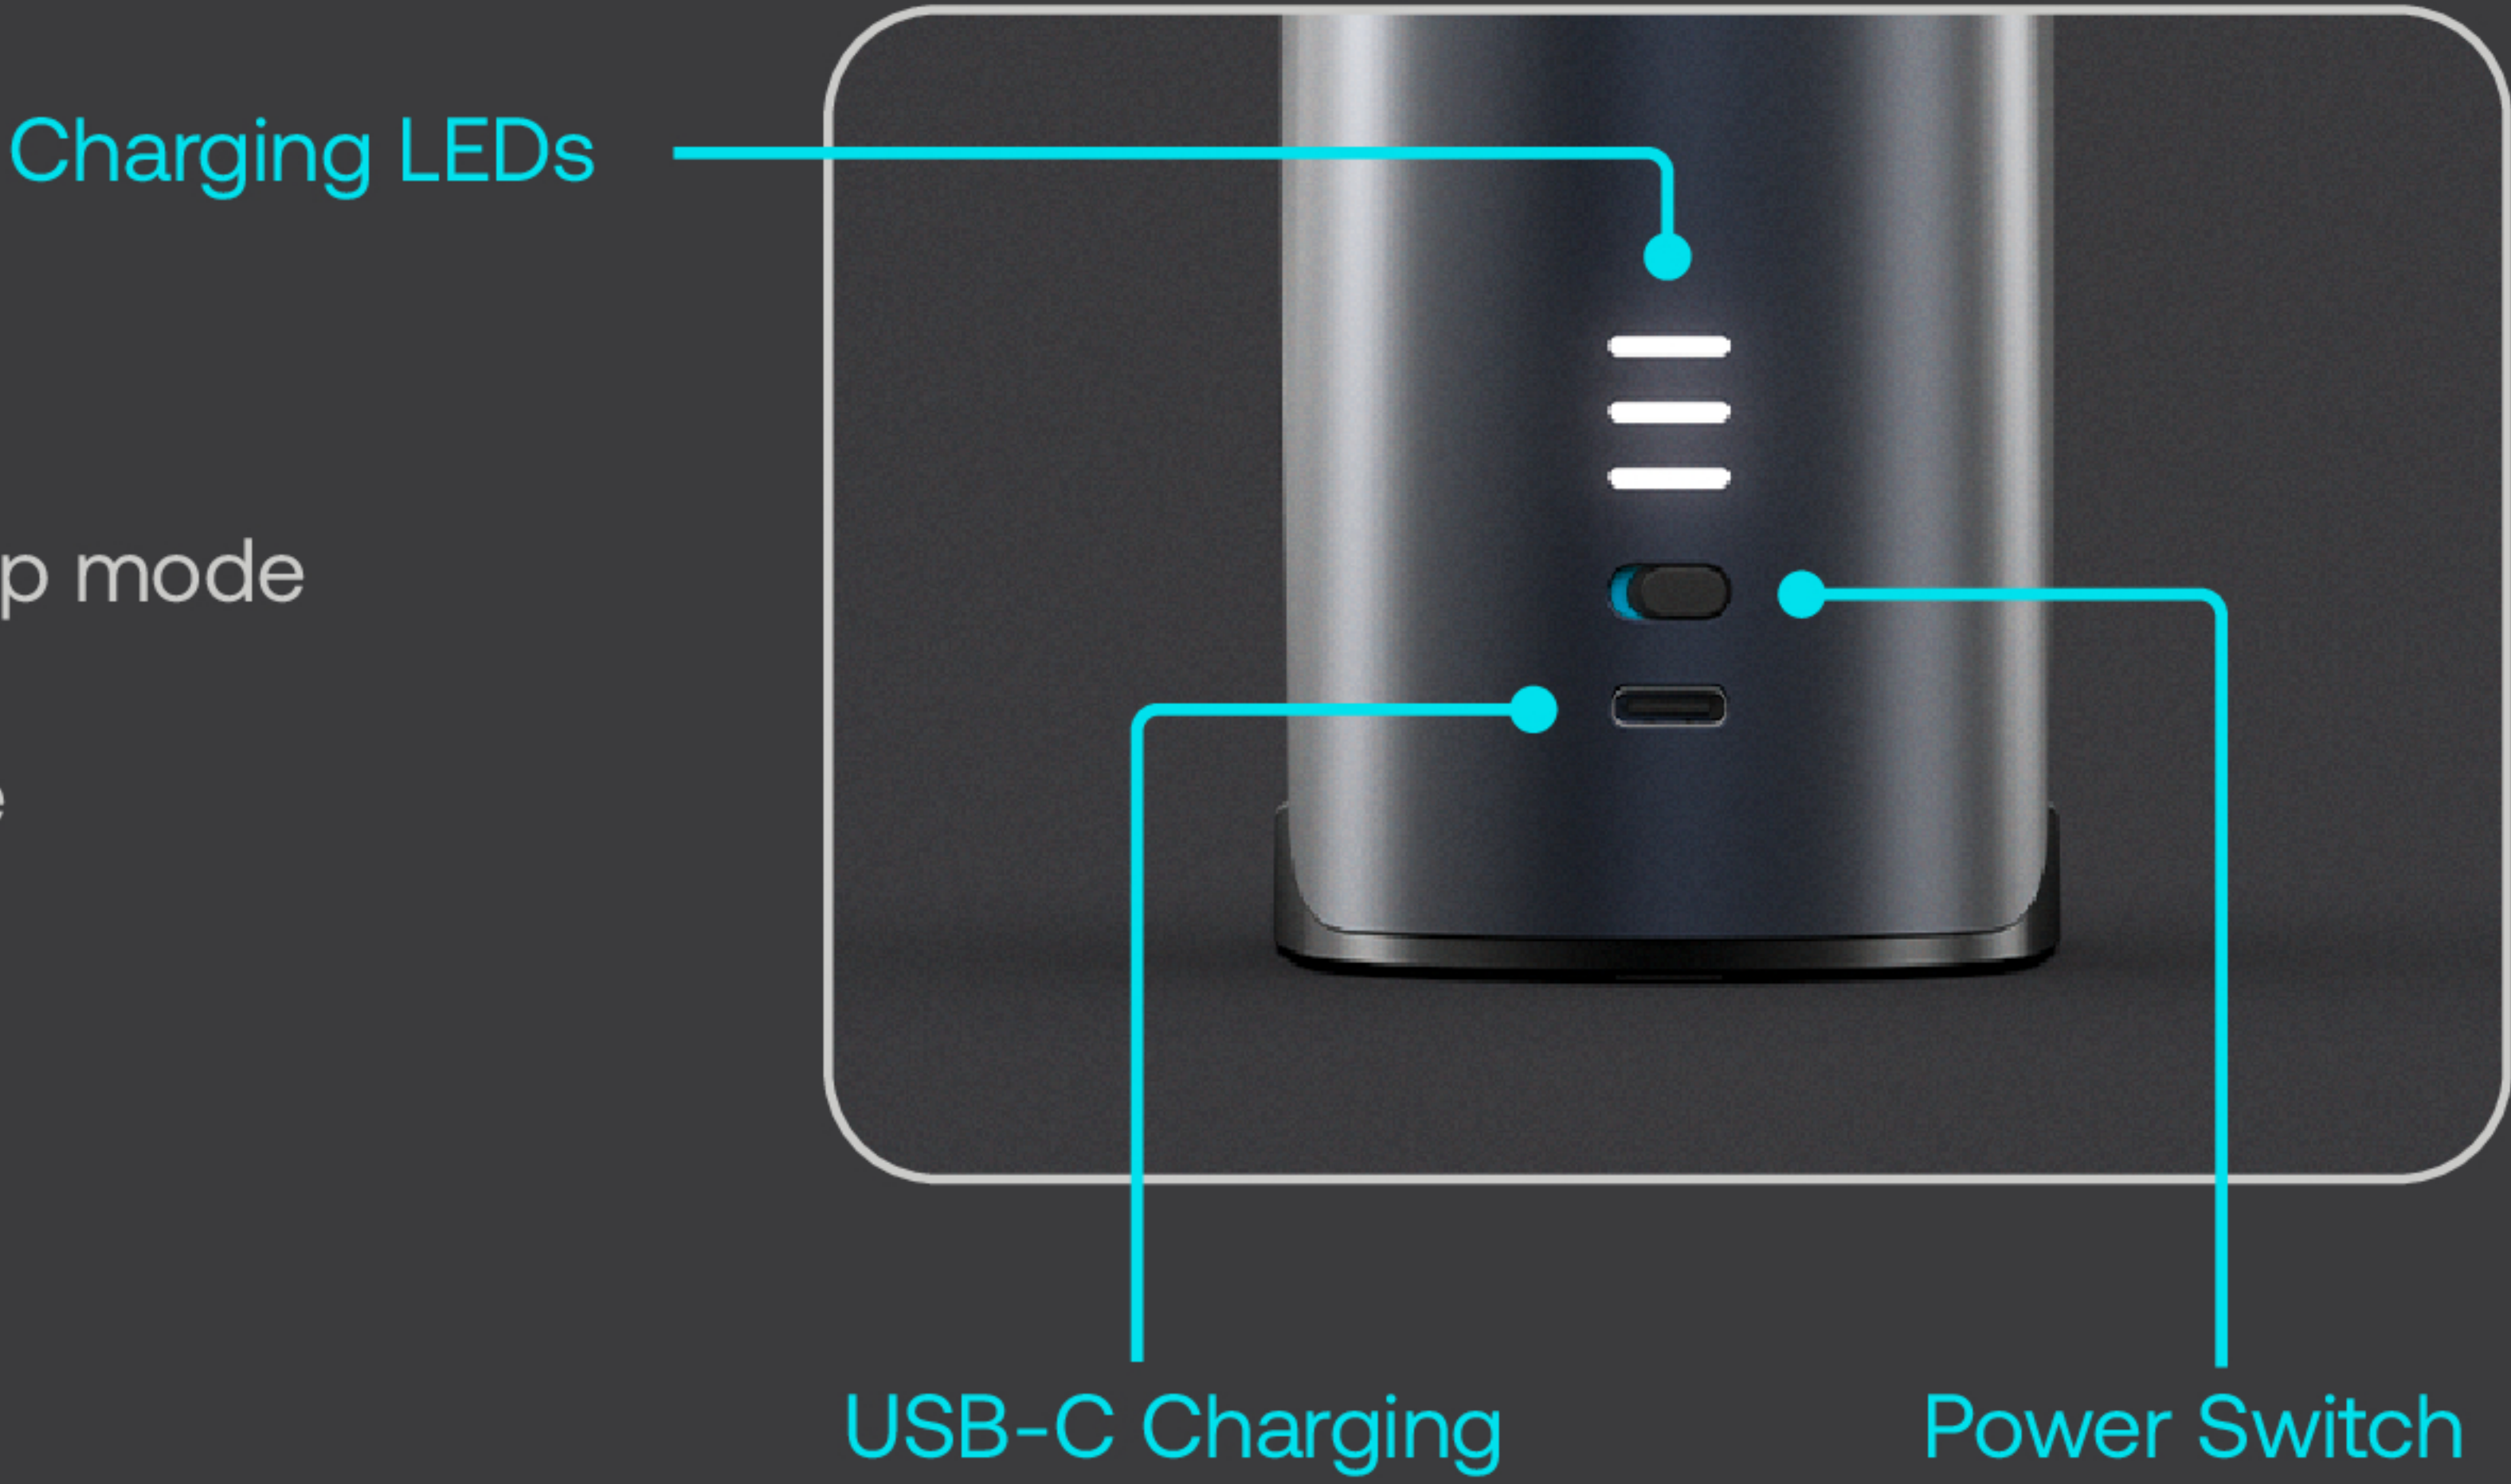

Activate Heating Cycle:

- Press the  button once to activate. The LEDs will pulse Red to indicate heating and Green when the Switch² reaches desired temperature
- Heating cycle can be cancelled at any time by pressing the button again
- 3 white flashes from the LED band indicate a low battery



Setting	Default Temperature (°F)	LED
Setting 1	400	 Purple
Setting 2	440	 Blue
 Setting 3	480	 Cyan
Setting 4	500	 Orange
Setting 5	540	 White

 = The Default and Our Recommended Setting



Charging:

- To charge, plug the charging cable into the device. The device can be used while charging. LEDs will pulse White while charging and turn solid when fully charged

Getting Started

- Use the supplied charger to fully charge your Switch²
- Rest both hands on top of the crown and gently push upwards from the bottom of the glass attachment with your thumbs to remove. **Never pull up from the mouthpiece to remove the glass attachment as it can break and cause injury**
- Once the glass attachment is removed from the device, fill the attachment up to the top of the percolator puck with water. Filling lower than this point will affect vapor quality
- Gently push the glass attachment back down into place, ensuring that the markings on the attachment and the device are lined up. This will align the glass with the vapor pathway
- Lift off the magnetic carb cap and load your concentrate into the insert with the supplied Drop loading tool. It is very important to avoid putting the tip of the loading tool directly in the insert. Hover the loading tool above the insert and click the button to heat the concentrate on the tip and drop it into the insert. Do not scrape the tool on the edge of the insert as the electronics in Switch² can be damaged if the battery powered Drop comes in contact with the induction field
- Place the carb cap back on the insert to seal the induction well
- Your device is now ready to use! You can either use the +/- buttons on Switch² or the app to choose your temperature, then just hit the button to begin the heating cycle

Push From Bottom



Alignment Lines


Cleaning Tips

- We recommend swabbing your insert with Iso-Snaps or cotton swabs after every use for optimal flavor and longevity
- If you need to remove the insert for deeper cleaning, remove the glass attachment and set it down on a stable surface, then gently pry off the aluminum crown to reveal the induction well. Always use the supplied tweezers to remove the insert and be very careful when removing, as both the quartz and the sapphire inserts are very fragile and can break easily
- **Removing the insert is not required for regular maintenance and is only recommended when absolutely necessary. NEVER remove the insert when it is hot. Wait for the device to cool down after use before removing to avoid burns**
- We recommend using 99% isopropyl alcohol to clean the glass attachment. Ensure your attachment is thoroughly rinsed with clean water and refilled before using again
- Do **NOT** use isopropyl alcohol on the outer shell of Switch² as it will damage the Blue Onyx finish. If necessary, use a damp paper towel with a small amount of dish soap to wipe down the body, making sure to avoid water entering the charging port





Enter the same account details
you use on drdabber.com

If you do not already have an
account on drdabber.com,
create an account to link
your Switch²

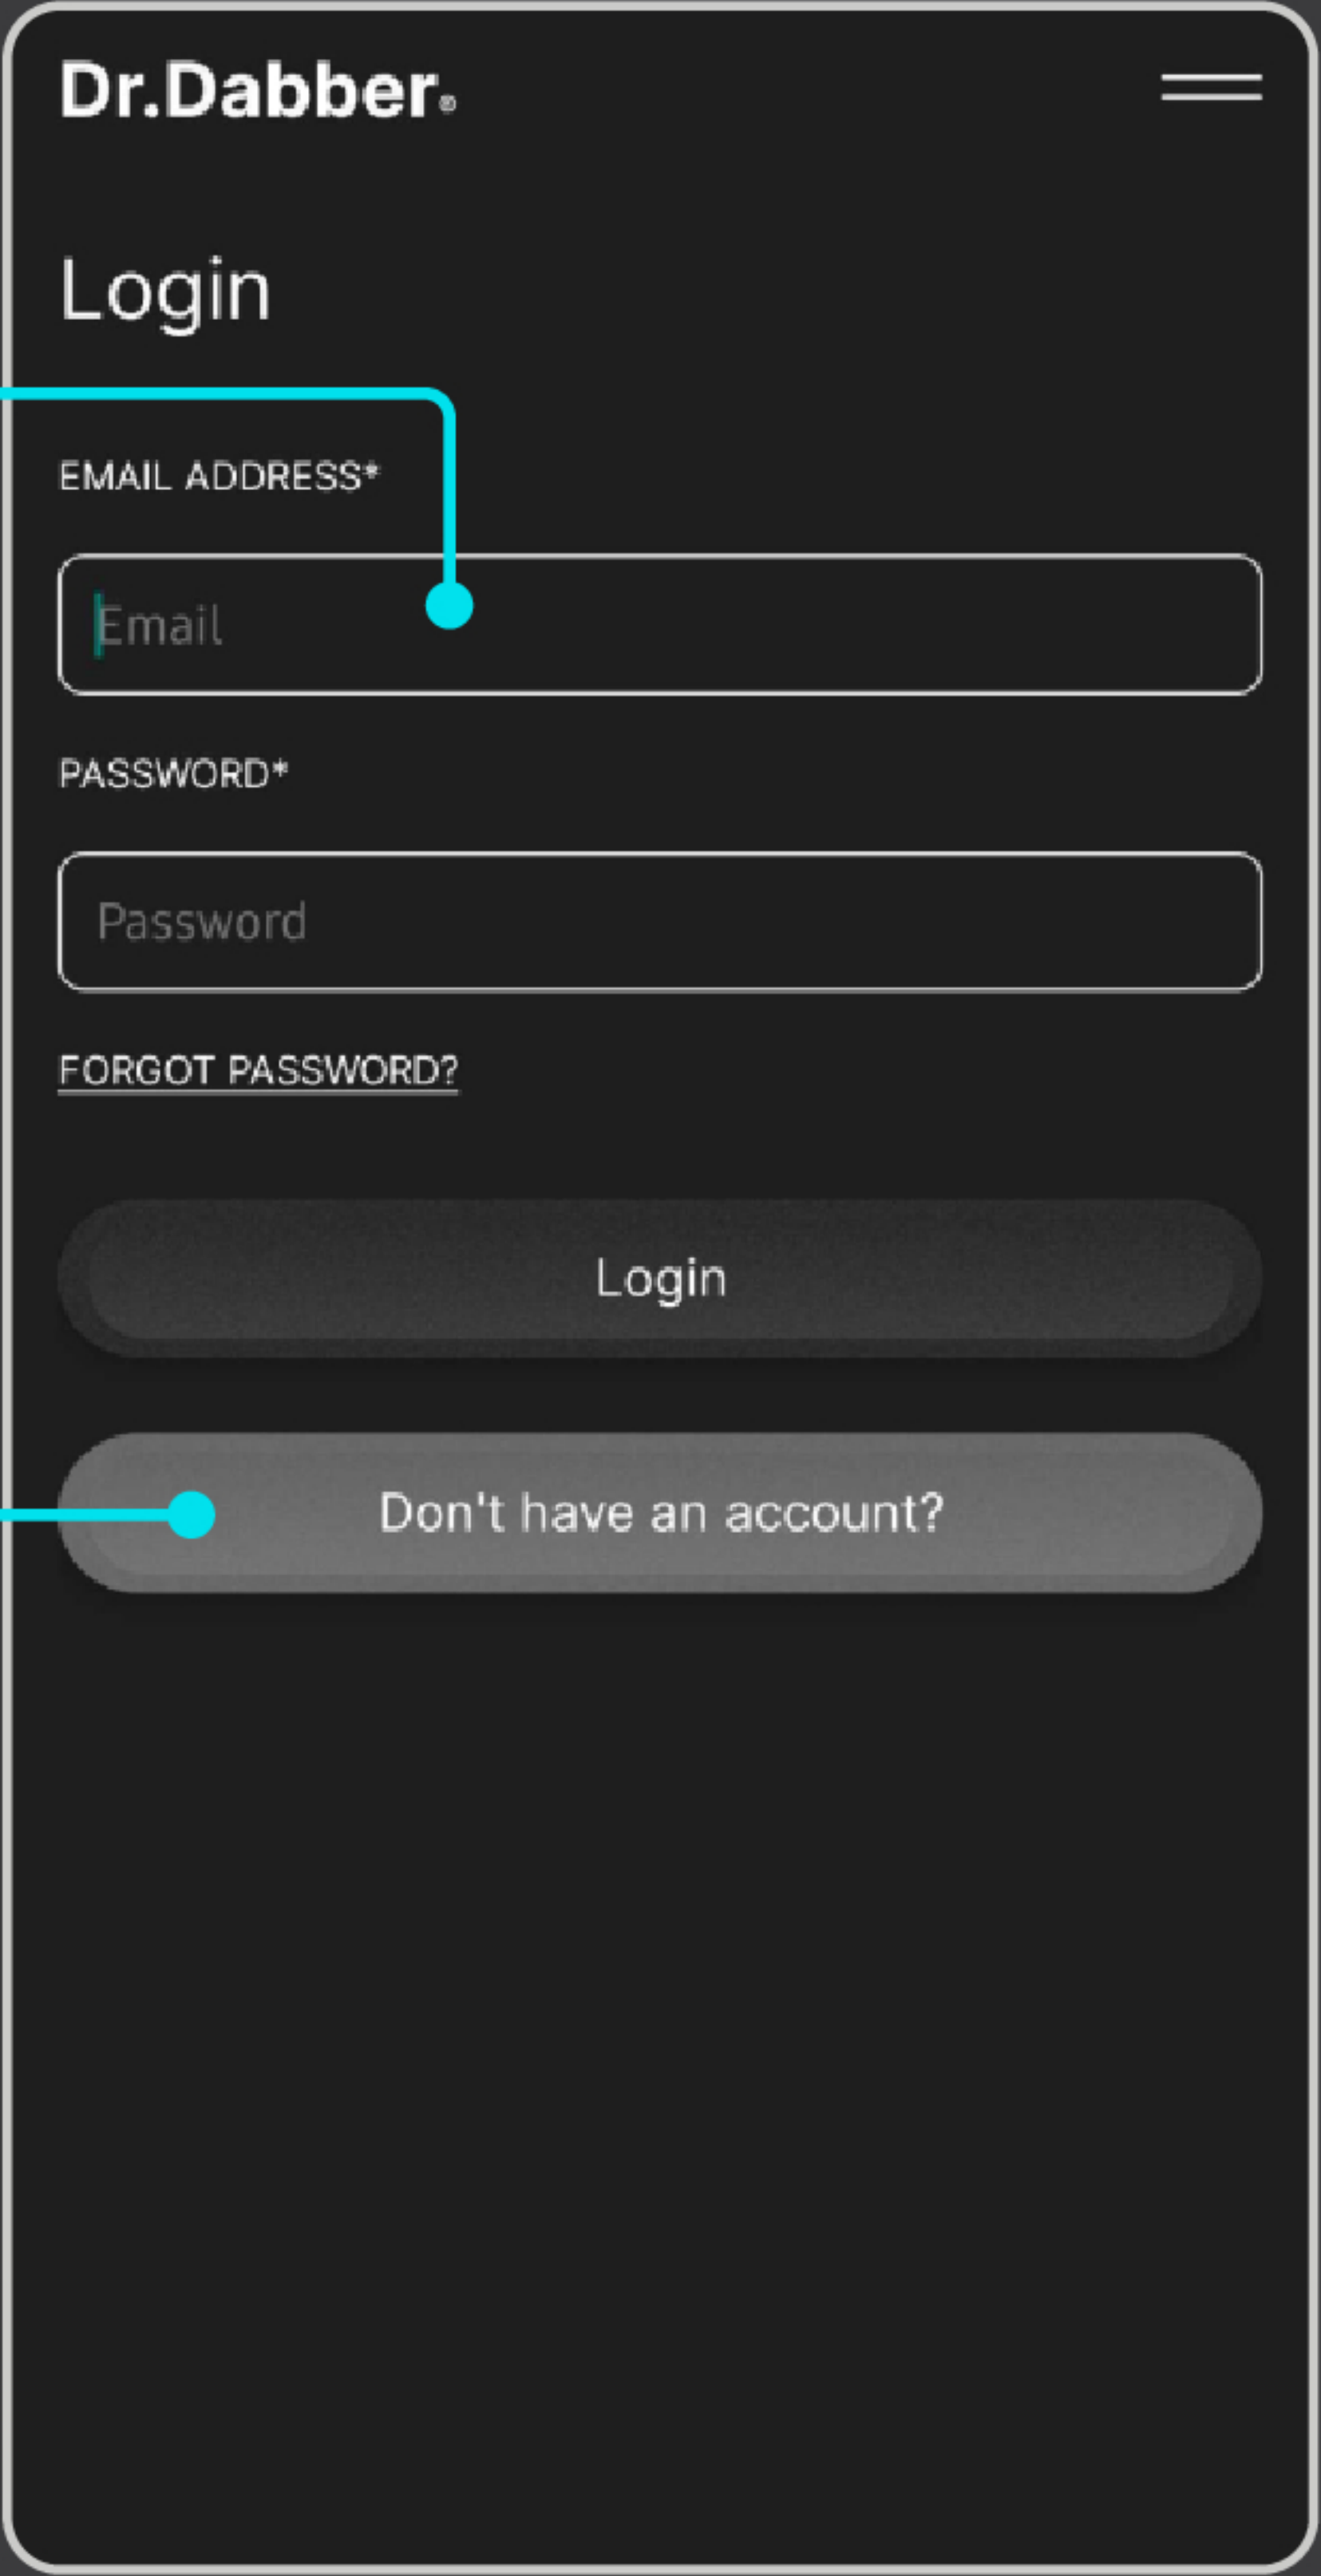

This page will show
all information about how
you use your Switch²

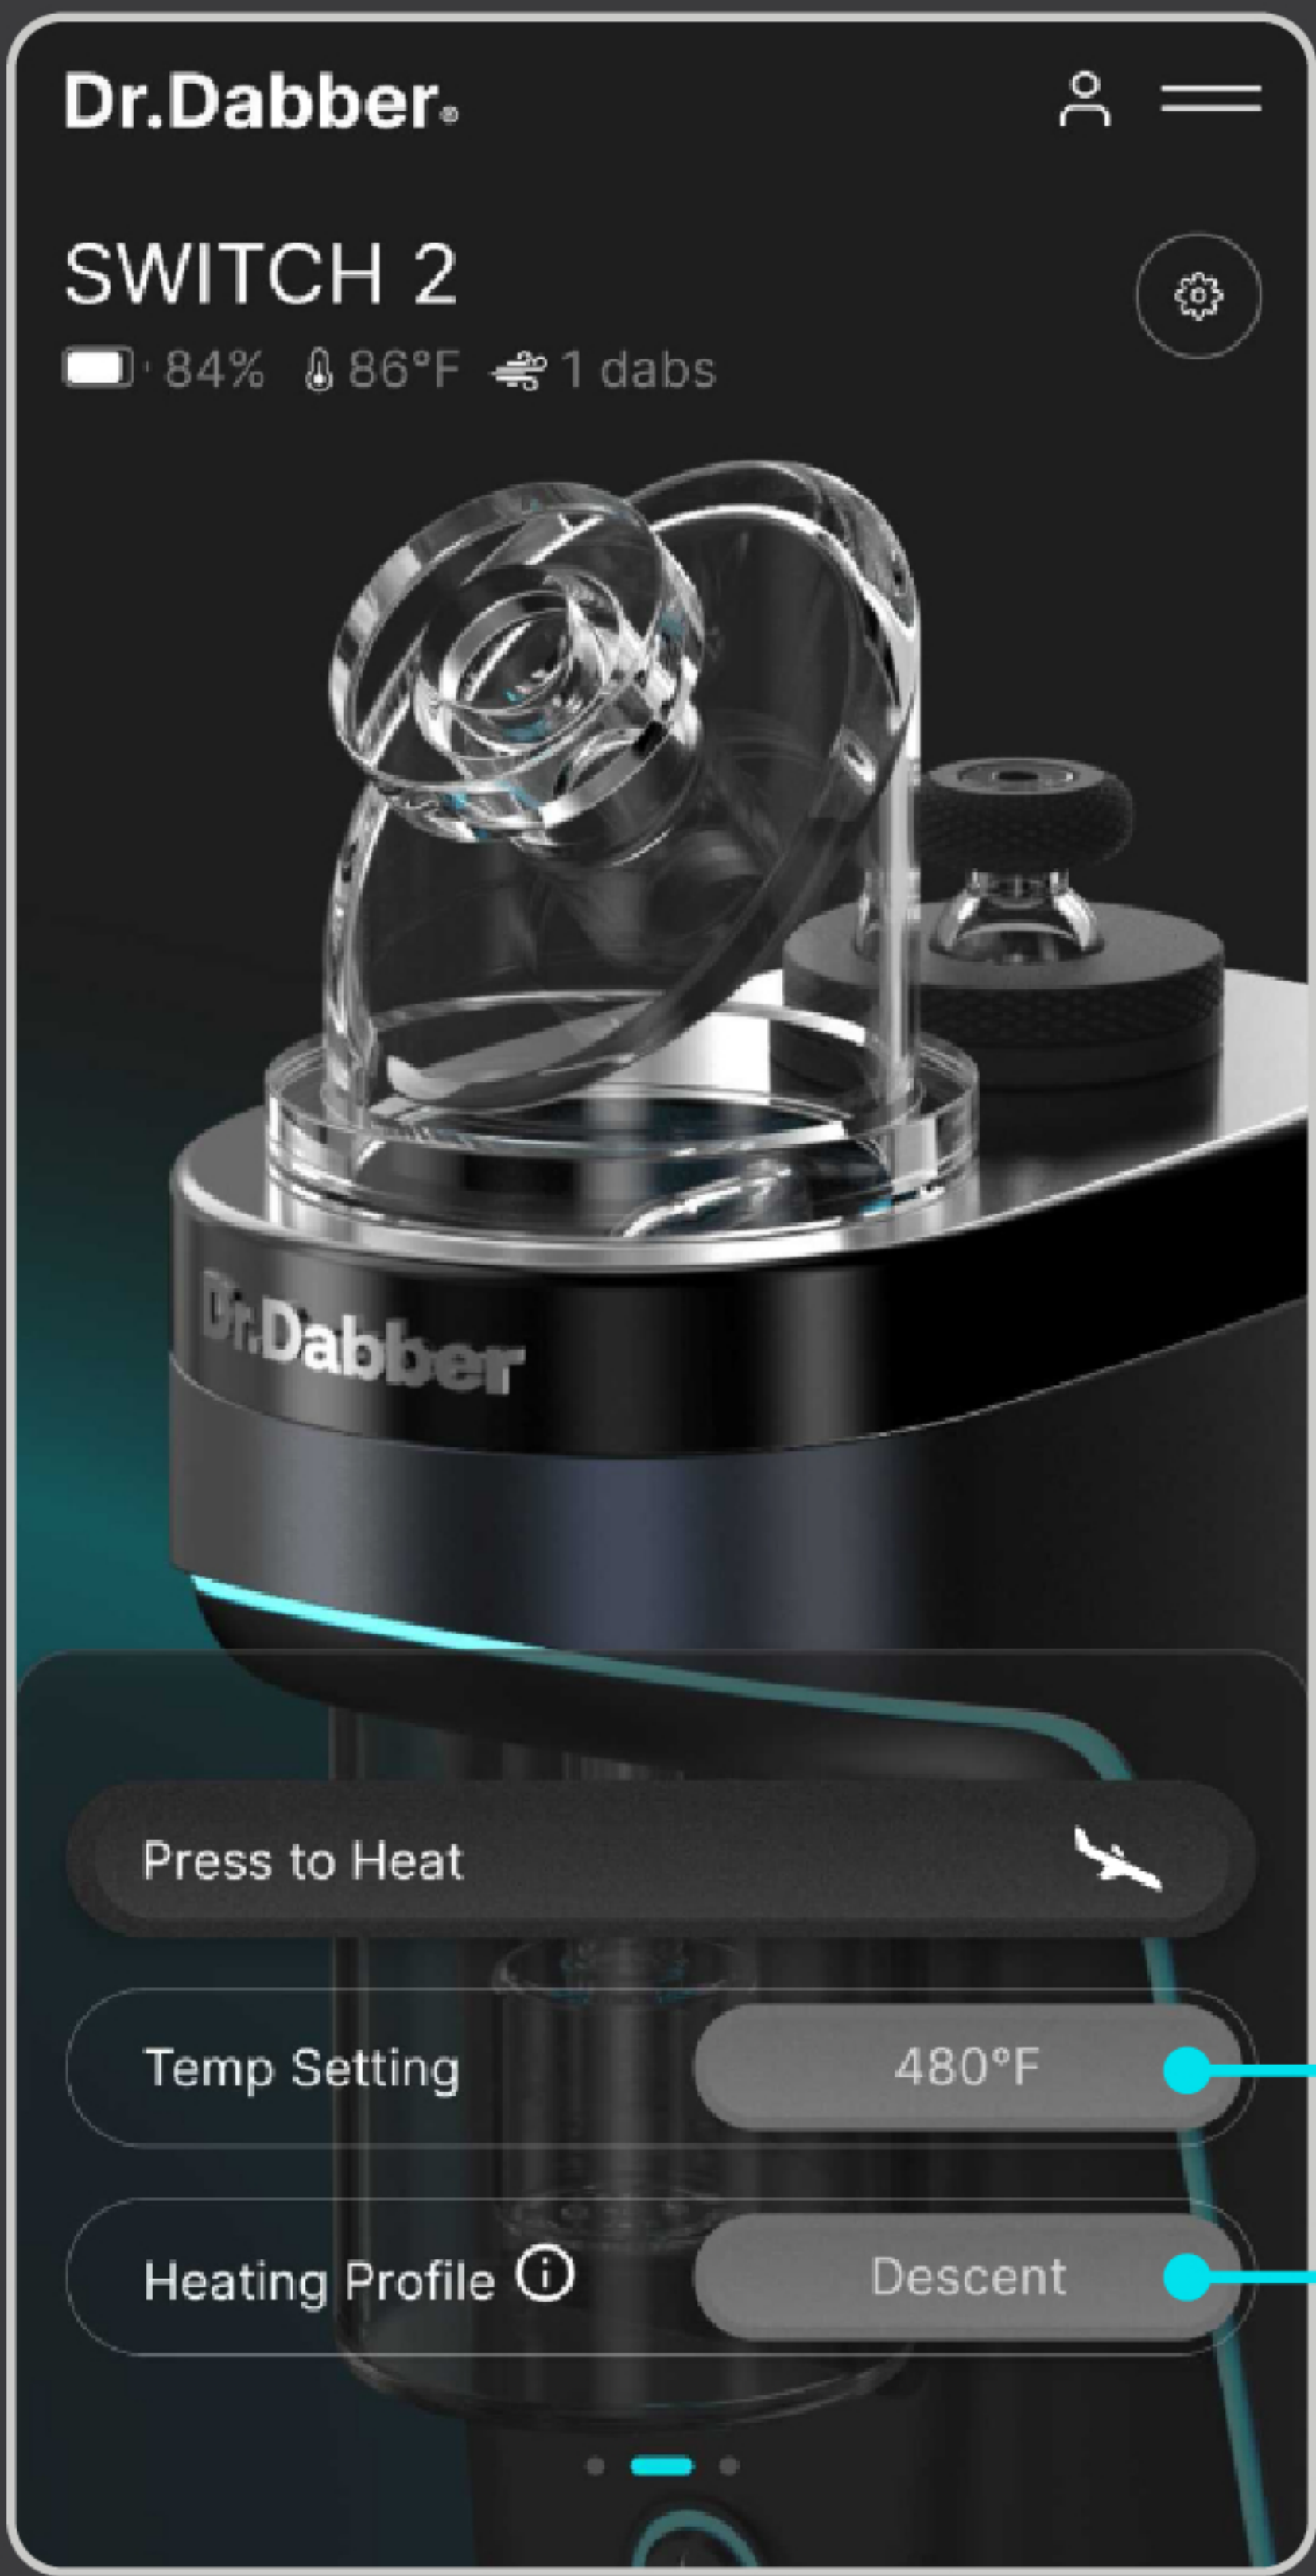
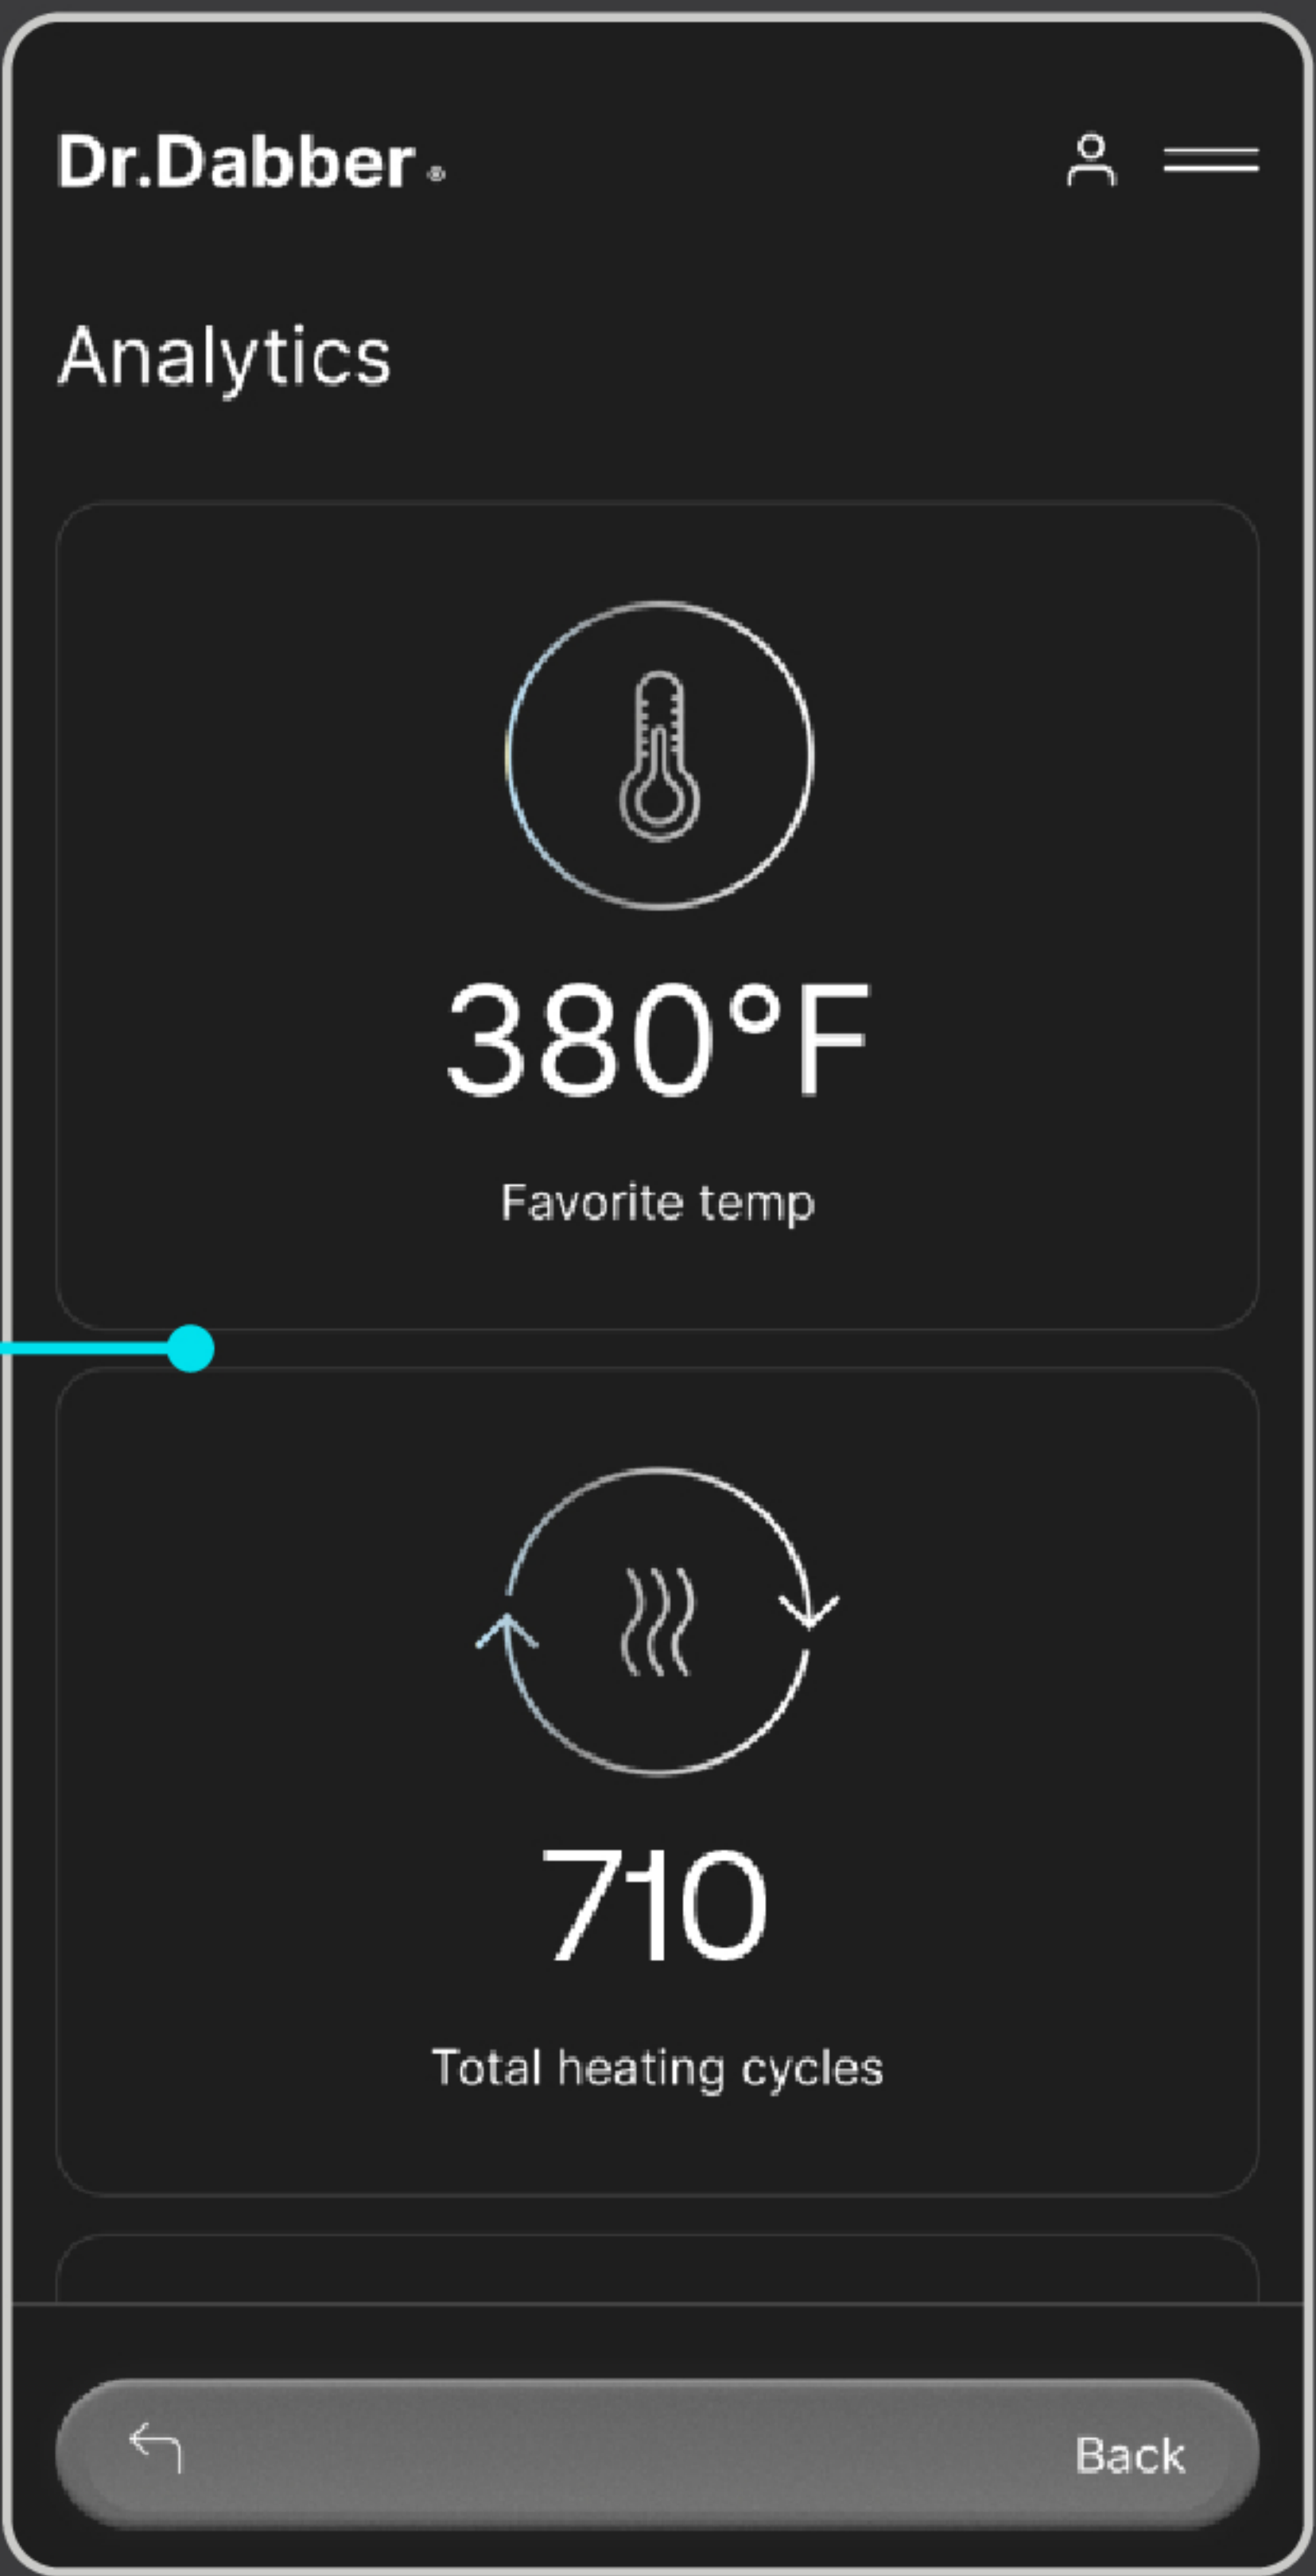


Tap to select heating profile

Press and hold to customize heating profile

Tap to reset your customized settings to default

Tap to generate a code to share your heating profile with friends or to enter a code you have received

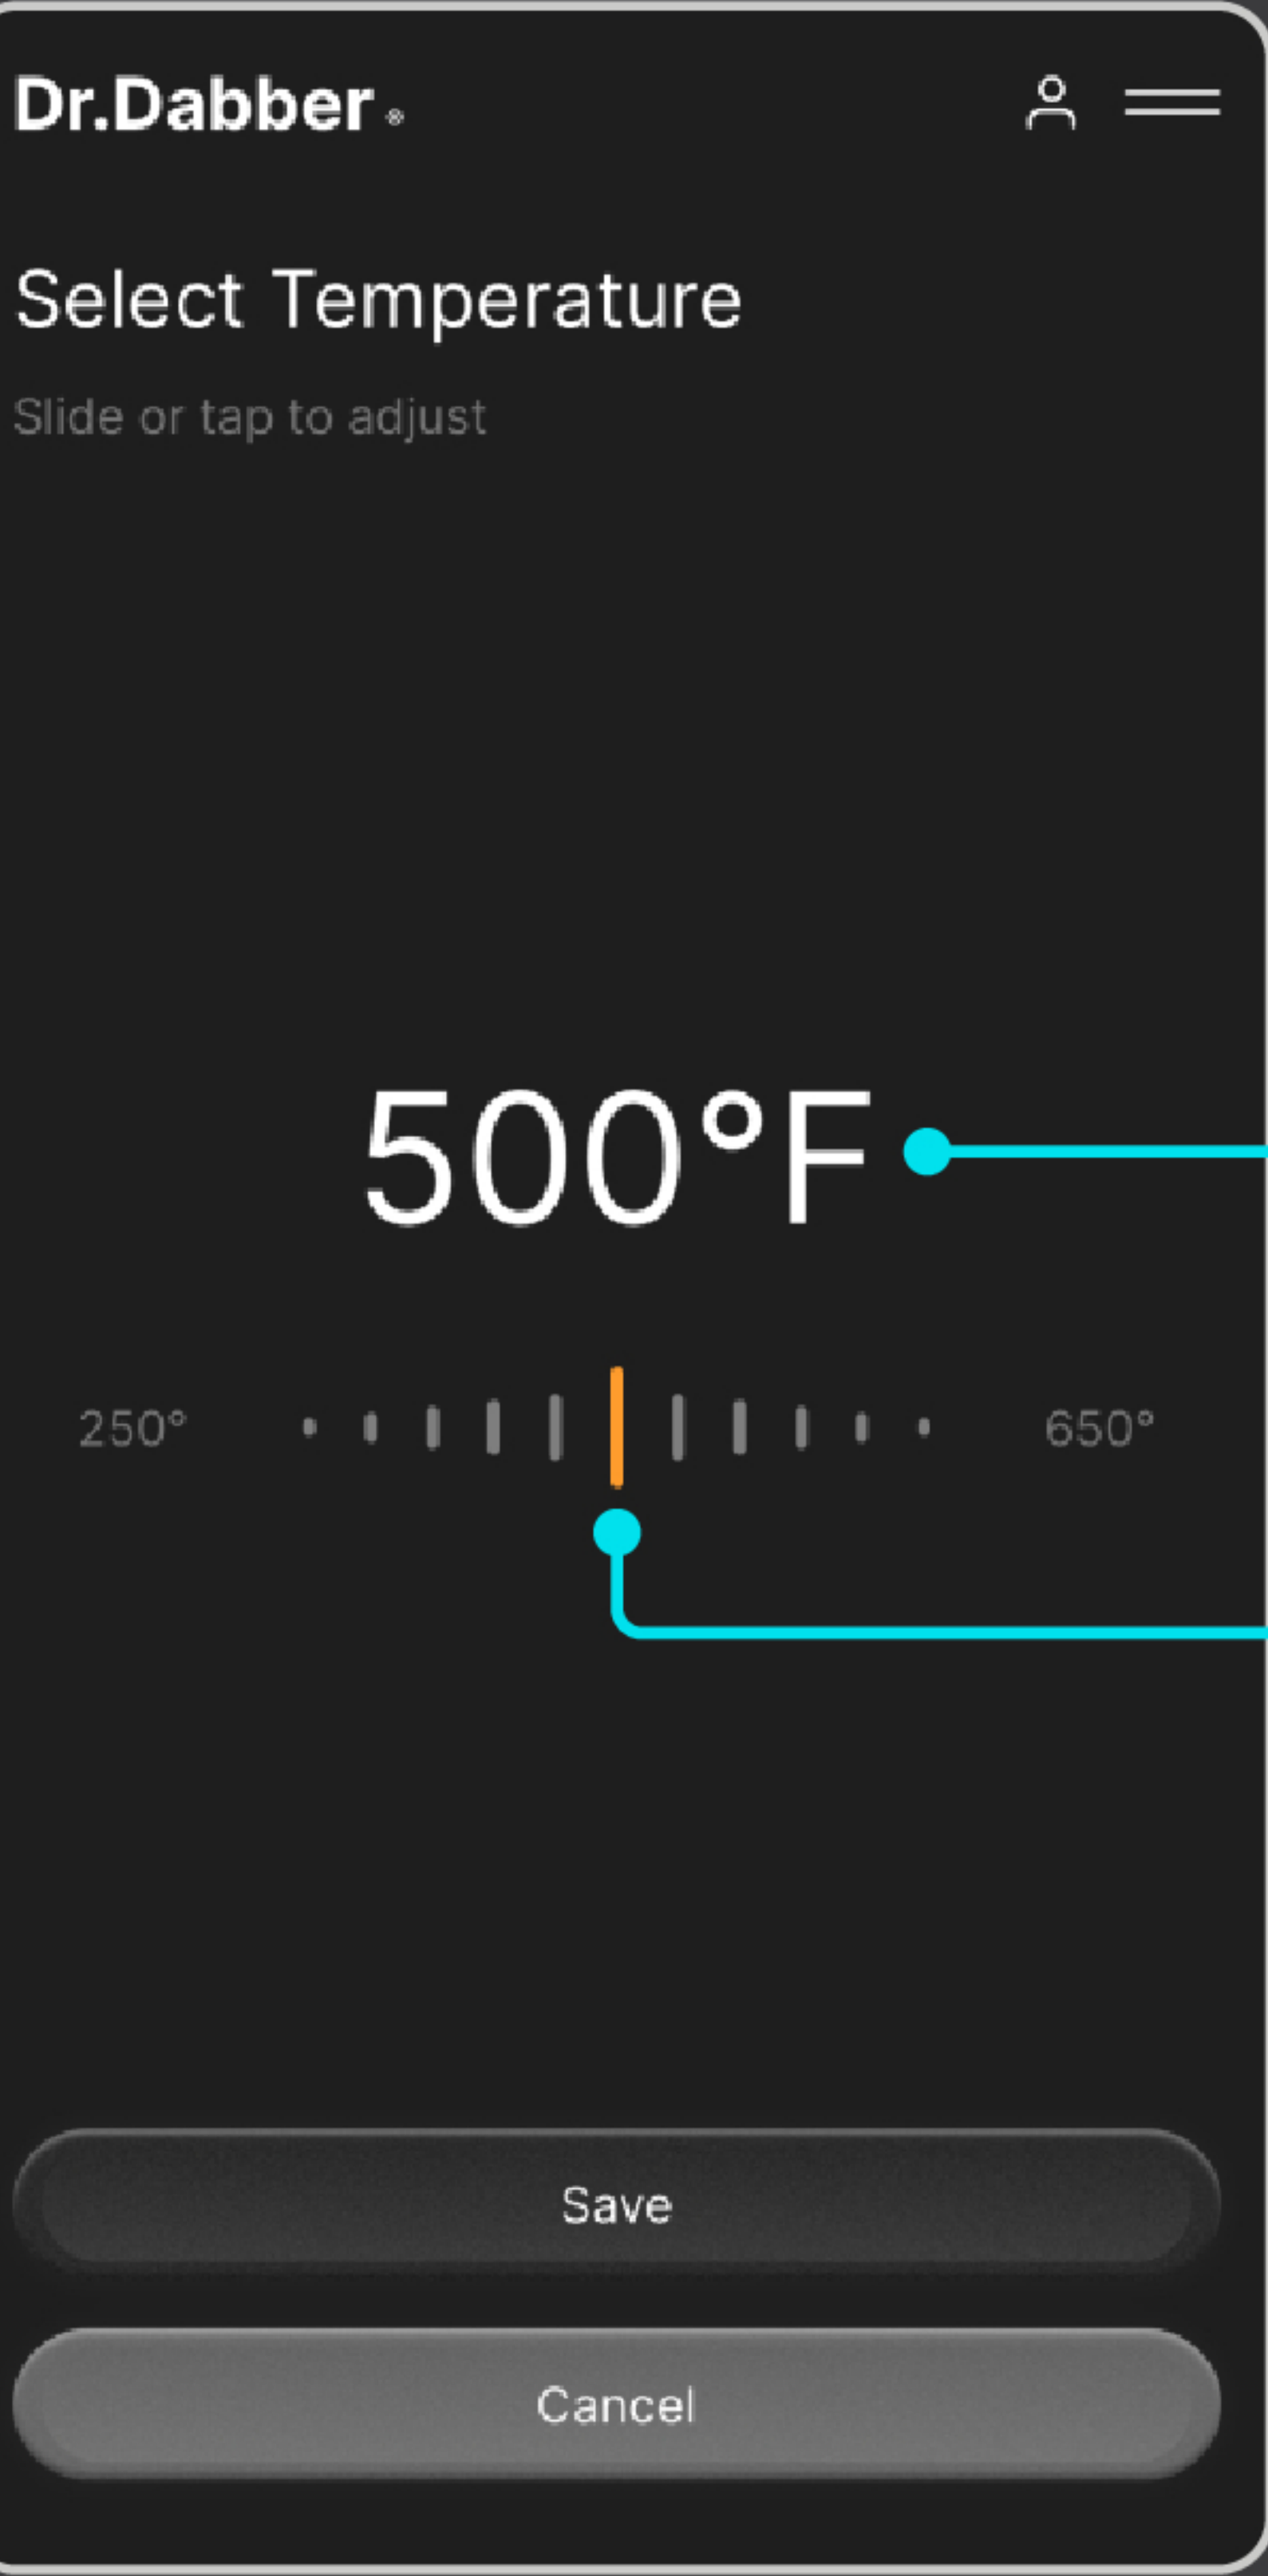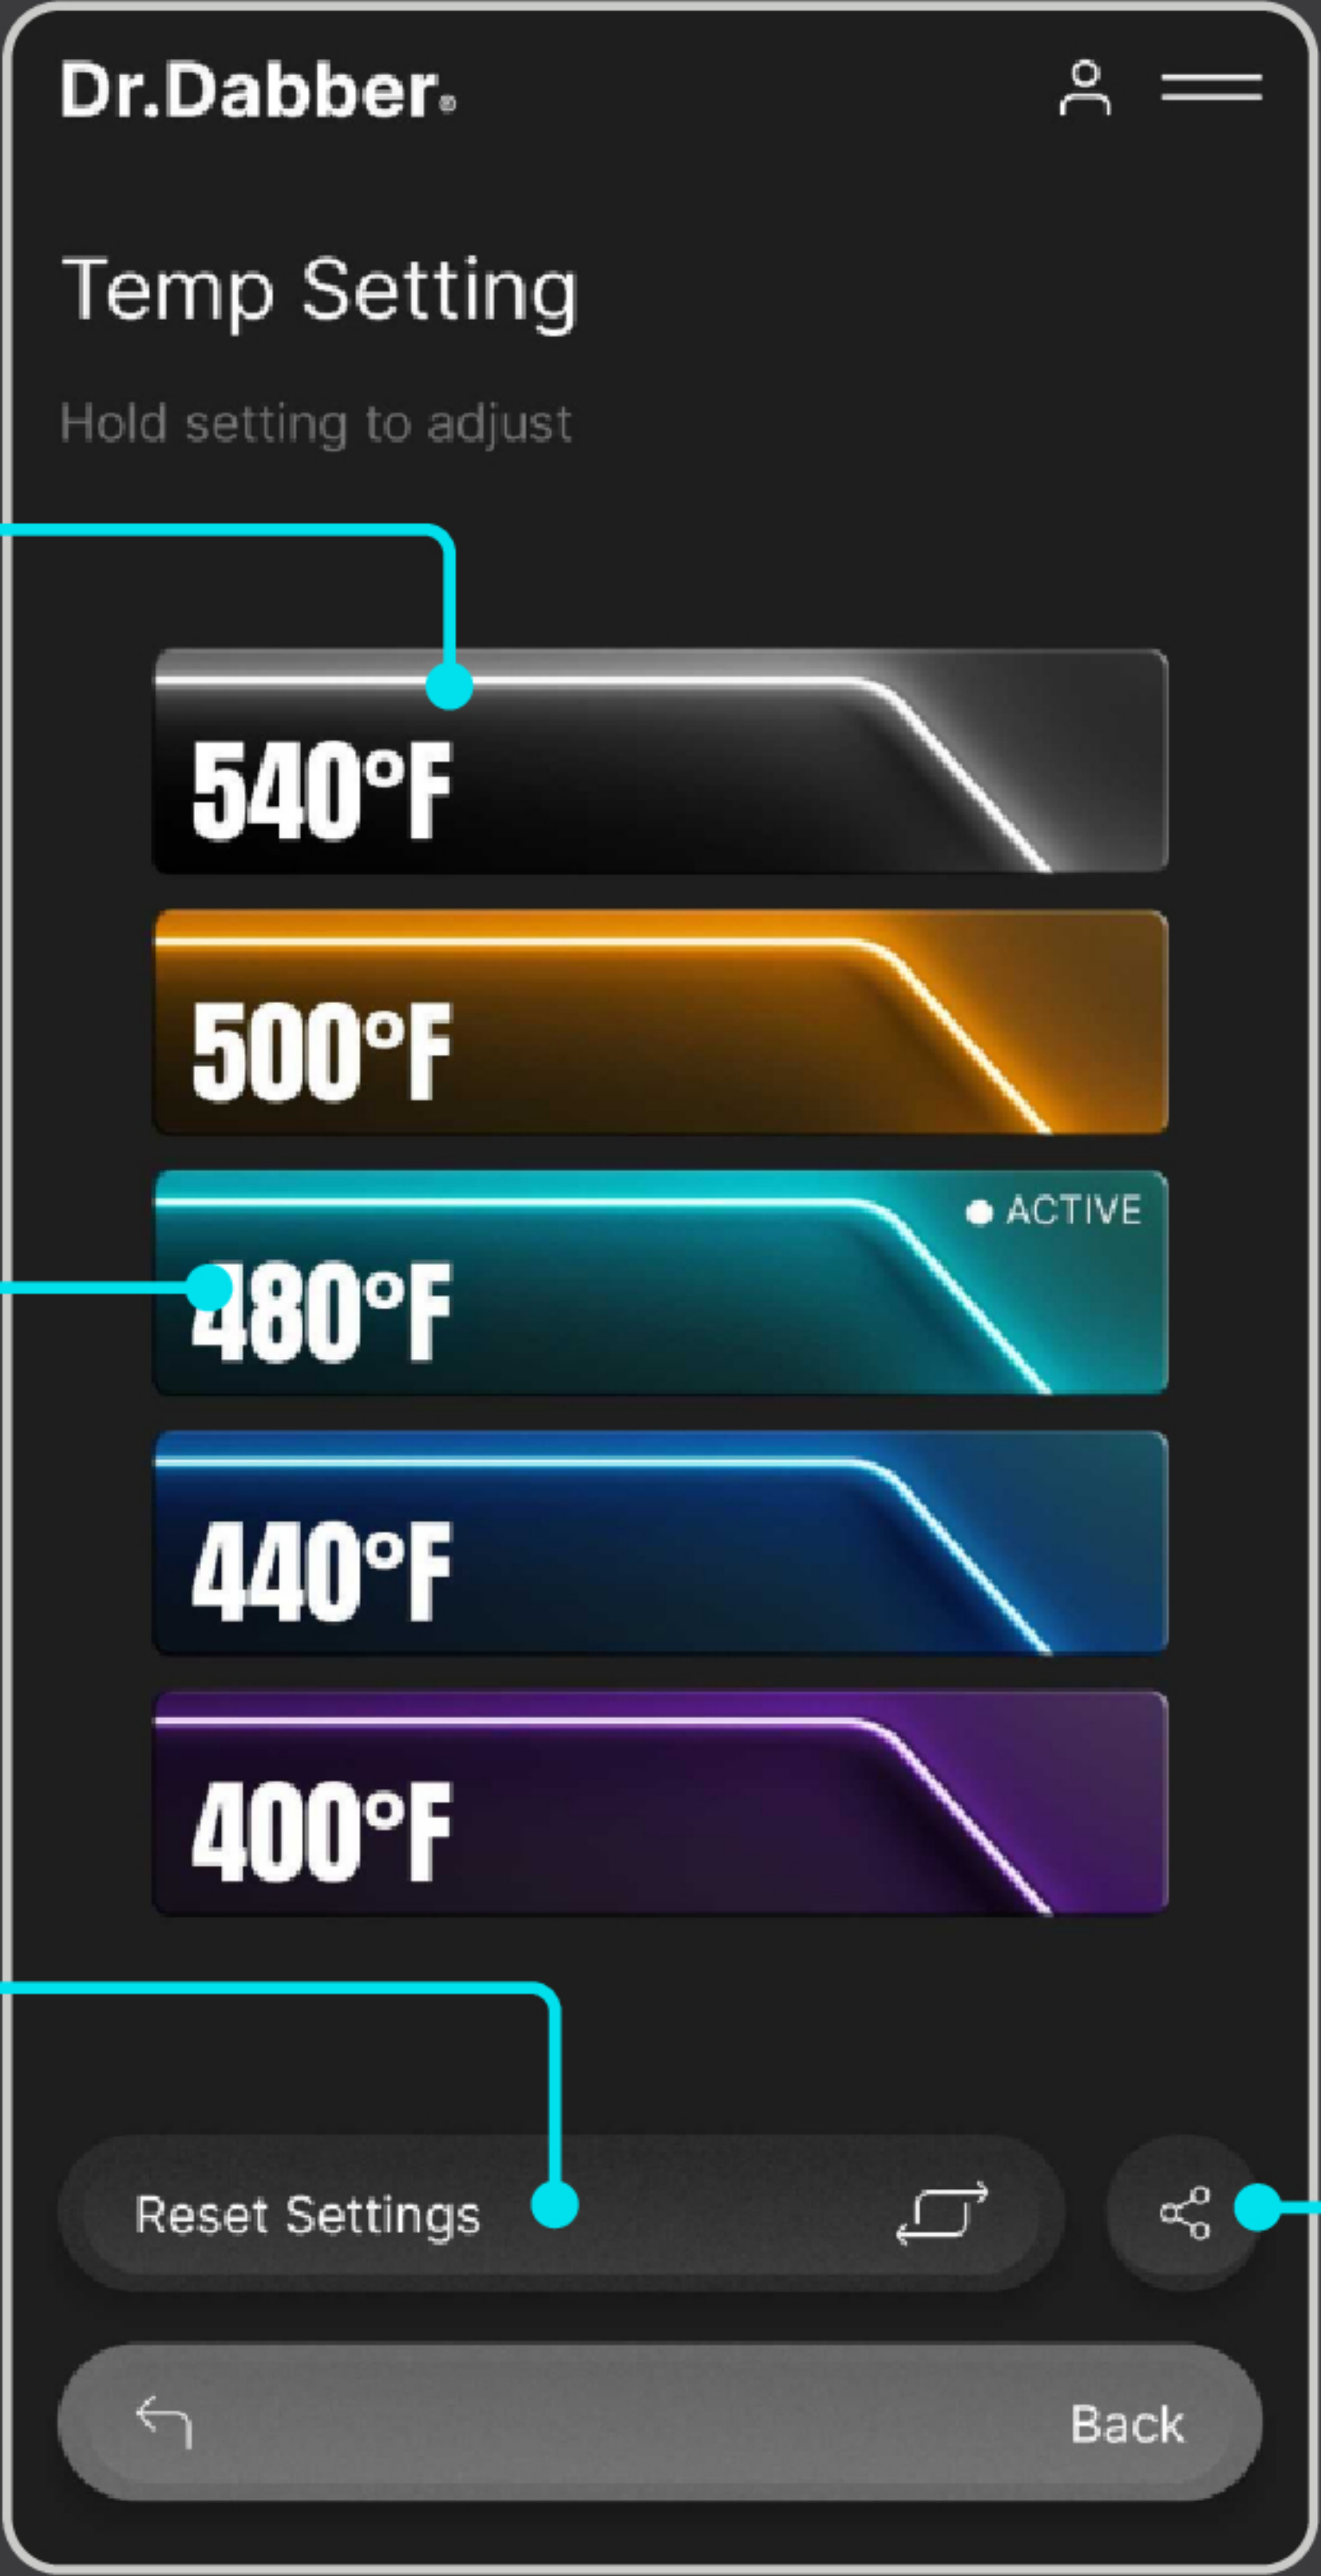


You can manually enter a temperature by tapping here

To customize a temperature preset, swipe left or right to adjust temperature, then click save

Tap here to choose your ambient light mode

Tap here to adjust the hold time of your Switch²

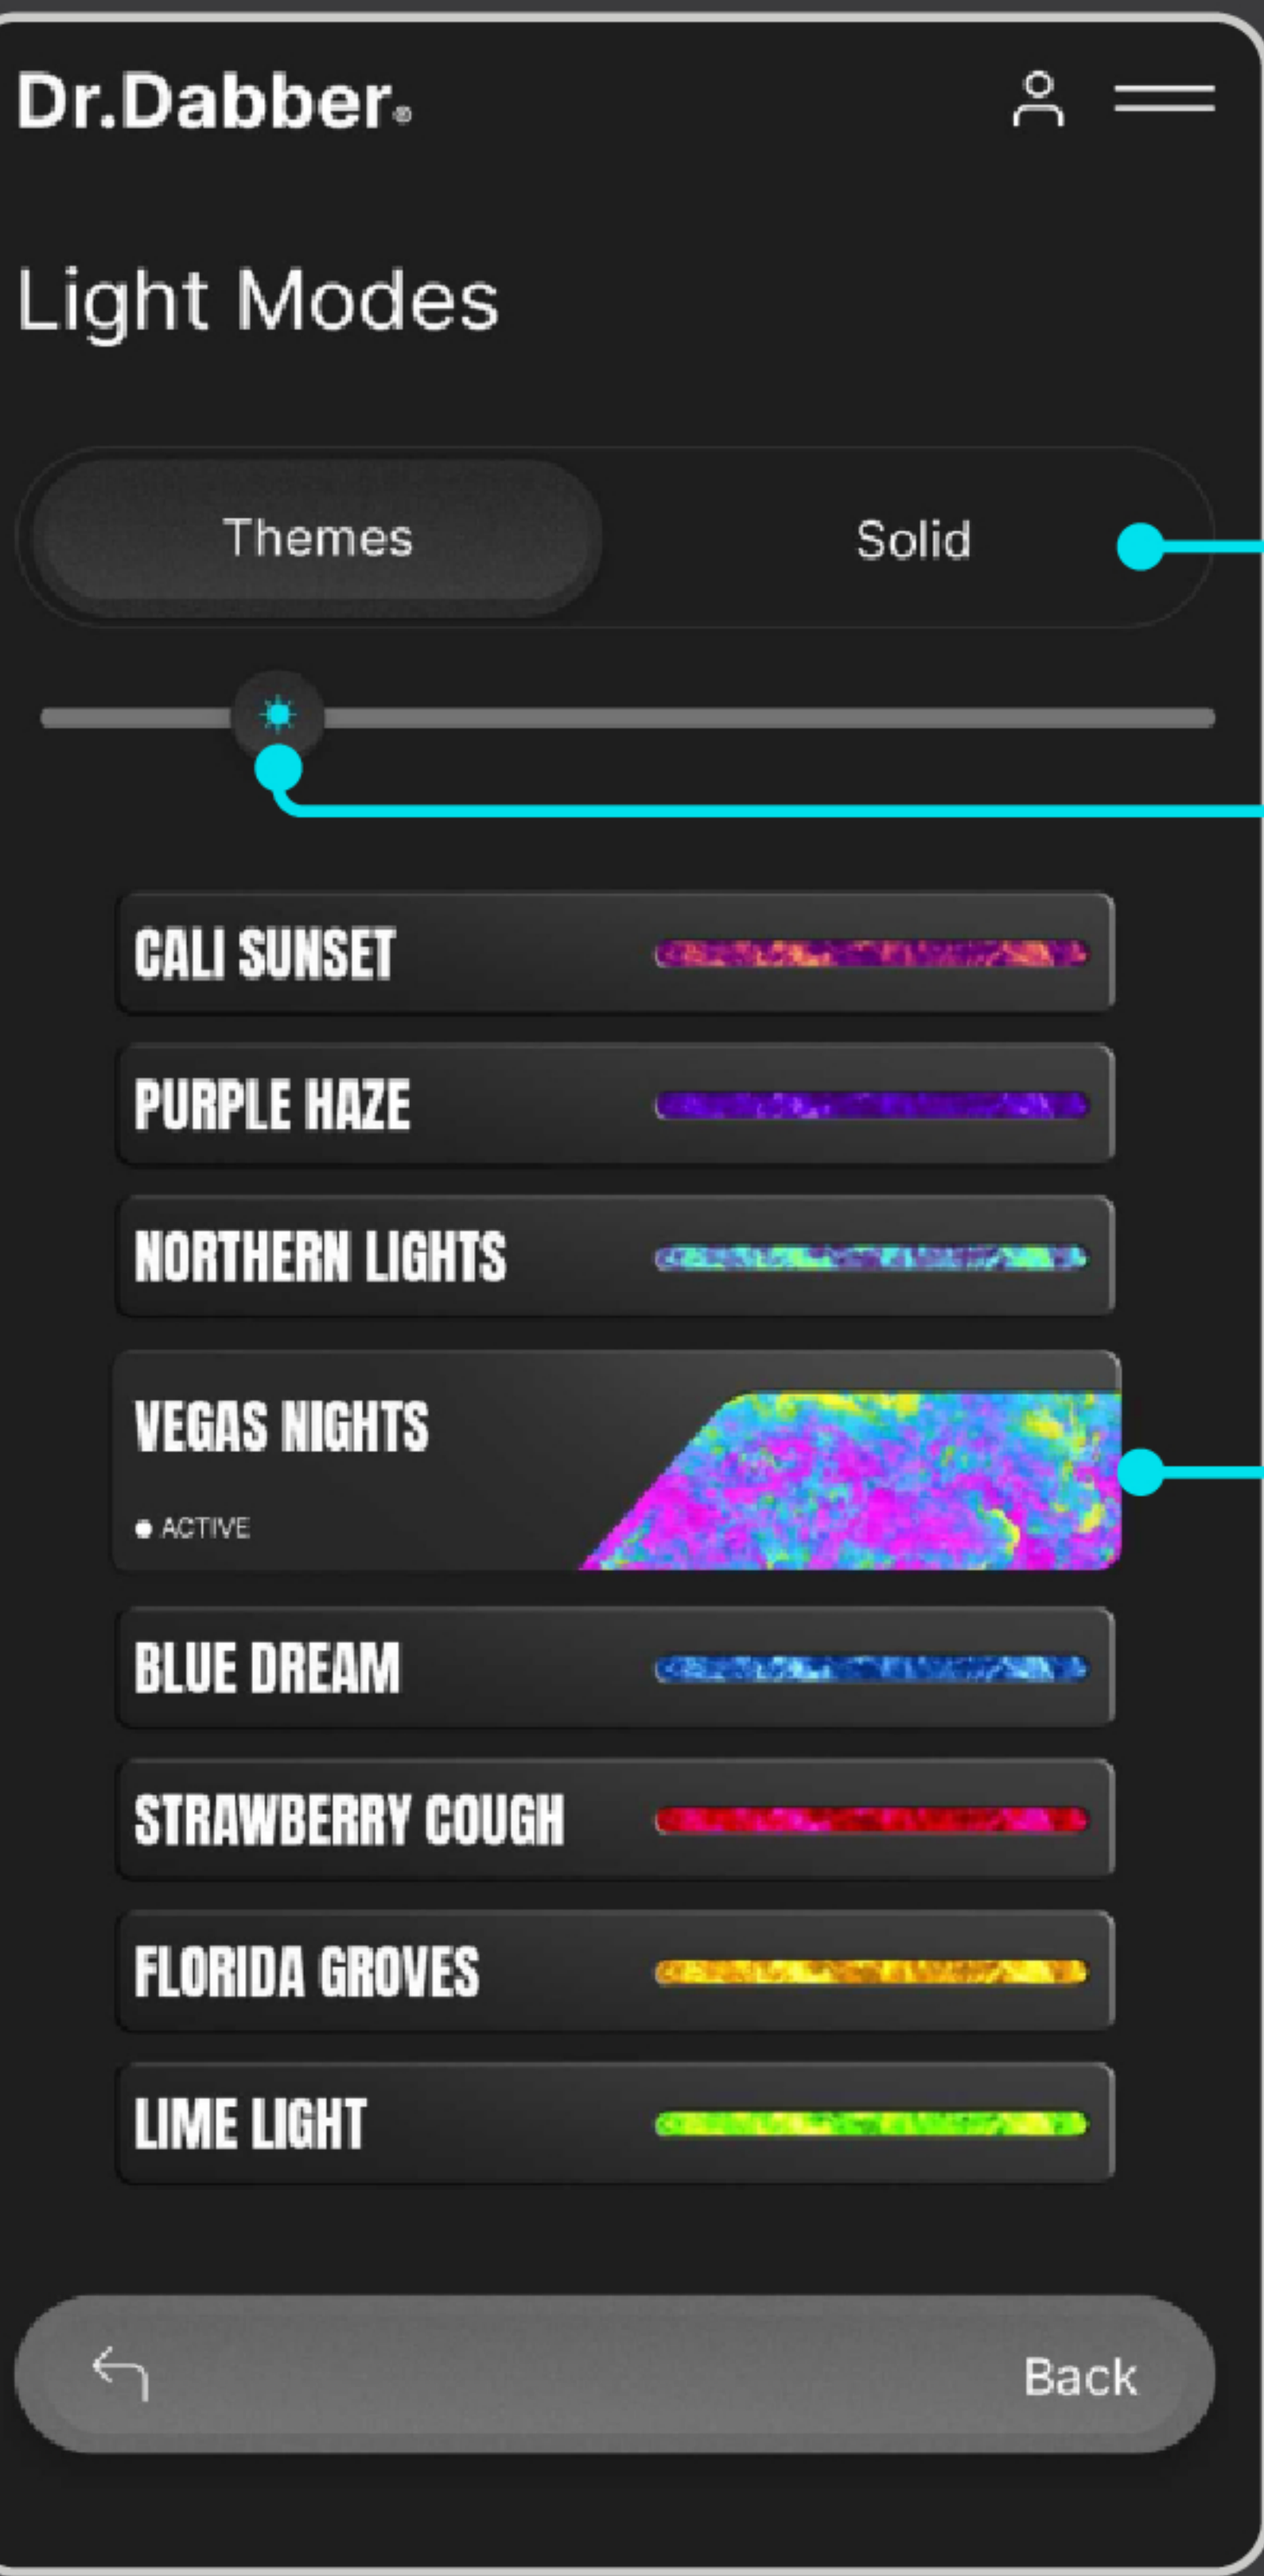

Tap here to access Solid colors

Slide left or right to change brightness. Slide all the way to the left to activate stealth mode

Tap any theme to change the lights on your Switch²

